 
## BASIC STEPS INSTALLING A SLICK MAGNETO


WARNING: Failure to review engine manufacturer's approved maintenance publications may lead to magneto damage or failure.

(Step 1) Look on Mag Dataplate for Rotation




(Step 2) Pin Magneto in L or R hole, see above.




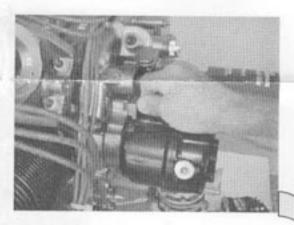


(Step 5) Remove Pins BEFORE TURNING PROPELLER

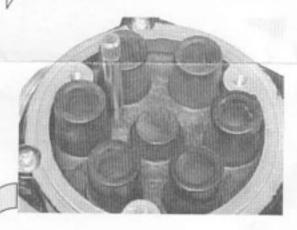


(Step 3) Find #1 Cylinder COMPRESSION Stroke and set engine to Base Timing

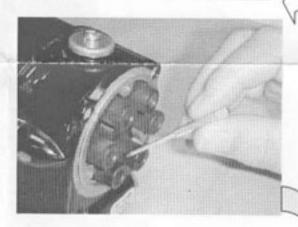

(Step 6) Time Mags

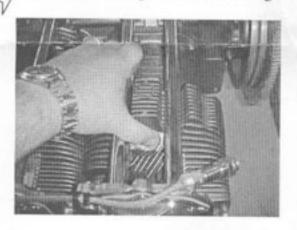

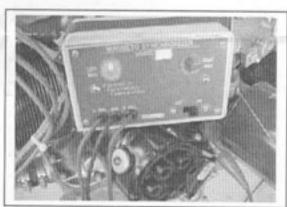

Detailed Review Material Available at http://www.unisonindustries.com select <u>Products</u> then select <u>Product Literature</u>